



Instruction Sheet

Colour Touch Screen Thermostat


Code: WF TH04




For more information or for Warmfloor technical support, please visit www.warmfloornz.com

Thank you for choosing a Warmfloor thermostat.
Please enter your installers details on the info and help menu
There are two operating modes, Manual and Automatic
Set your timer and temperature settings in the Main Menu


Manual Mode Screen

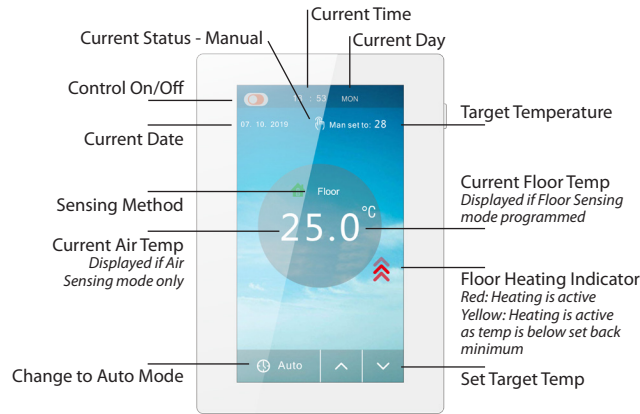

Auto Mode Screen

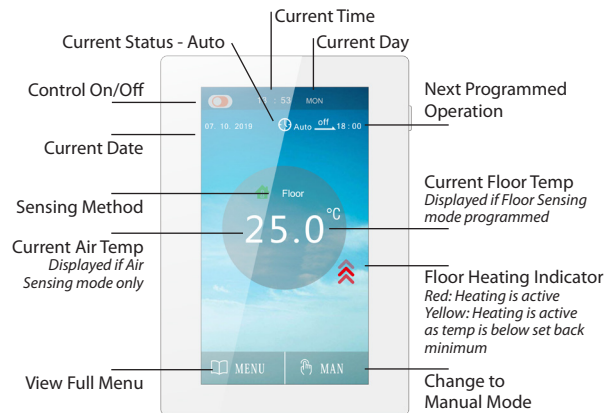

Main Menu Screen

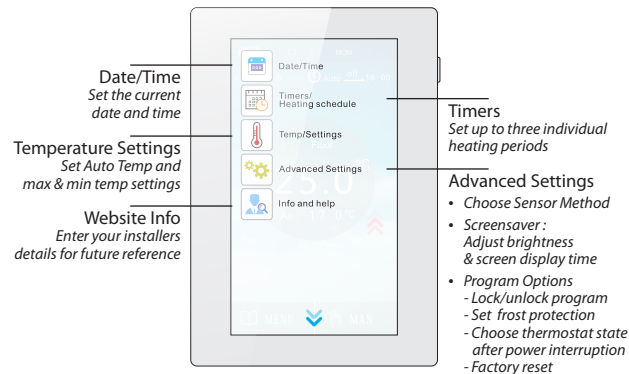

Initial Set-Up

Turn on

Menu > Date/Time - highlight date and time by touching them, use arrows to alter as required. Press ✓ when set, then confirm.

Setting the Timer (Automatic Operation)

There are three day blocks to set your timer, week day, weekend or individual days. By pressing to highlight the days in each of these menus, you can either include or exclude them from your schedule. Press ✓ when set, then confirm.

Each of these day blocks has three associated time periods. Alter these time periods by pressing ▲ or ▼. Press ✓ when set, then confirm.

Once all programming is complete, you can review your settings by pressing View Heating Schedule.

Manual Operation

Press MAN (manual mode) on bottom right of screen. If AUTO is shown on the bottom left of the screen, you are already in manual mode.

Use the ▲ & ▼ arrows to select desired temperature, which will be displayed at the top right of the screen.

Temperature settings

From the main menu press Temp/Settings.

Here you can set the target temperature for Automatic operation.

Also limiting and set back temperatures can be altered here. Press the information icon for a description of these functions.

WARRANTY

Warmfloor warrants this product to be free from workmanship or material defects for a period of three (3) years from the date of purchase by the consumer. Warmfloor reserves the right to repair or provide a replacement unit at their discretion. This warranty does not cover removal or re-installation costs.