


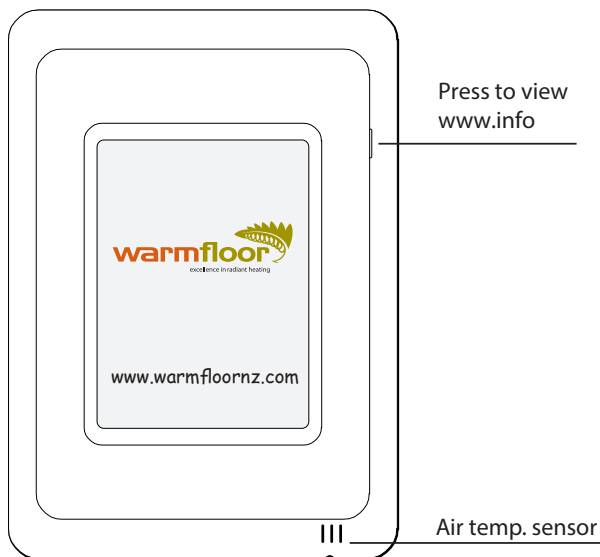

Colour Touch Screen Thermostat

Code: WF TH03

Instruction Sheet

For more information or for warm floor technical support.


Please visit

www.warmfloornz.com


There are two operating modes,
Manual or Automatic.

Set your timer and temperature settings
in the Main Menu.


Manual Mode Screen

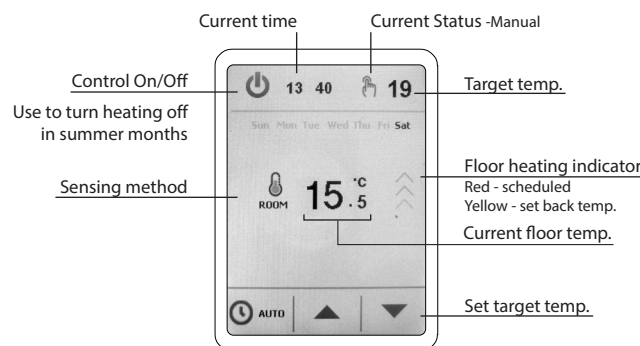

Auto Mode Screen

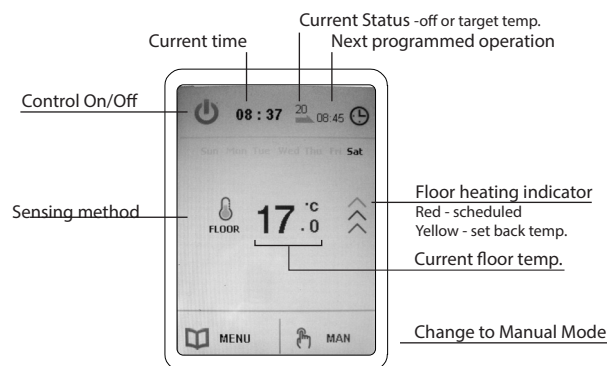

Main Menu Screen

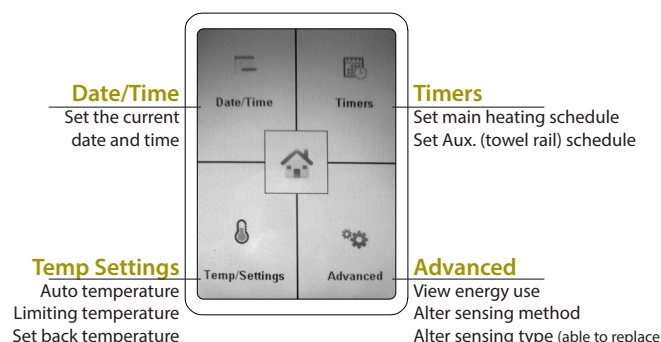

Initial Set-Up

Turn on

Menu > Date/Time - highlight date and time by touching them, use arrows to alter as required. Press ✓ when set, then confirm.

Setting the Timer (Automatic Operation)

Ensure either MAIN or AUX has been selected. The blue circle indicates which is selected to review or be set.

There are three day blocks to set your timer, week day, weekend or individual days. By pressing to highlight the days in each of these menus, you can either include or exclude them from your schedule. Press ✓ when set, then confirm.

Each of these day blocks has two associated time blocks. Alter these time blocks by pressing ▲ or ▼. Press ✓ when set, then confirm.

Set the Auxiliary (towel rail) in the same way.

Once all programming is complete, review your settings in the Main period or Aux period screen. Menu > Timers > Main.

Manual Operation

Press MAN (manual mode) on bottom right of screen. If AUTO is shown on the bottom left of the screen, you are already in manual mode.

Use the ▲ & ▼ arrows to select desired temperature, which will be displayed at the top right of the screen.

Temperature settings

From the main menu press Temp/Settings.

Here you can set the target temperature for Automatic operation.

Also limiting and set back temperatures can be altered here. Press the information icon for a description of these functions.

To maintain Auxiliary (towel rail) heating while disabling Main (underfloor) heating during summer, press Menu > Advanced > Programme/Options > Main Heating, then choose to enable or disable heating.

Warranty

Warmfloor warrants this product to be free from workmanship or material defects for a period of three (3) years from the date of purchase by the consumer. Warmfloor reserves the right to repair or provide a replacement unit at their discretion. This warranty does not cover removal or re-installation costs.